


H2 Front Fascia with Lower Center Grille Overlay H910

READ INSTRUCTIONS BEFORE PAINTING AND INSTALLING PARTS

Warranty is void if parts are painted prior to checking for damage or imperfections.

1. Remove the lower grille insert by firmly pulling outward on the grille insert. If you are able to stick your fingers into the round grille holes, do so and pull outward. The grille is held in with metal push clips.
2. Next remove the two large round plastic hole plugs located on the top surface of the bumper face just in front of the grille insert you removed. Use a plastic putty knife or a flat screwdriver and slide blade under the lip of the plug and push inward and upward. **BE CAREFUL NOT TO DAMAGE THE PLUG.**
3. Open hood and disconnect the plugs for the in-bumper driving lights. The plugs are located just behind the main hood grille easily accessed when hood is open. Shut the hood, then using an 18mm socket extension and ratchet remove the two bolts that you access through the holes that you removed the plugs from. Also remove the two bolts underneath the main front bumper pan.
4. The upper bumper and lower bumper pan will come off as one unit. Carefully lay the bumper on a padded surface face down – **DO NOT SCRATCH THESE PARTS.** Using a 10mm wrench remove the two nuts that hold driving lights in place and remove driving lights. Using a 13mm wrench remove all bolts that hold the upper bumper fascia to the main bumper pan. Remove the two black plastic inserts from the inside of the upper bumper fascia and reinstall it into the Truck Master Designs' fascia that you have custom painted. Install the TMD fascia onto the main bumper pan and reinstall the driving lights.
5. Reinstall the bumper unit back onto the vehicle. If you have a factory grill guard, be very careful when sliding the new fascia past the grille guard brackets. This is a very close fit. Finger start all four bolts that hold bumper onto vehicle, making sure everything is aligned and then retighten the bolts. Reinstall the black plastic plugs.
6. For installing TMD's lower center grille overlay, make sure the four metal clips stayed on the grille insert. If they did not stay on the grille insert then remove them from the main vehicle grille using pliers and reinstall them on the grille insert. **Now refer to drawing below.** Clean the textured surface of the factory insert with a cleaner such as Naptha or denatured alcohol. Wipe the surface you just cleaned with supplied isopropyl alcohol pads and rewipe with a clean, dry paper towel or rag. Peel away the red protective tape film from the backside of TMD's insert that you have custom painted and align it to fit over the factory piece and press together firmly. Align the clips with the holes and push into place.

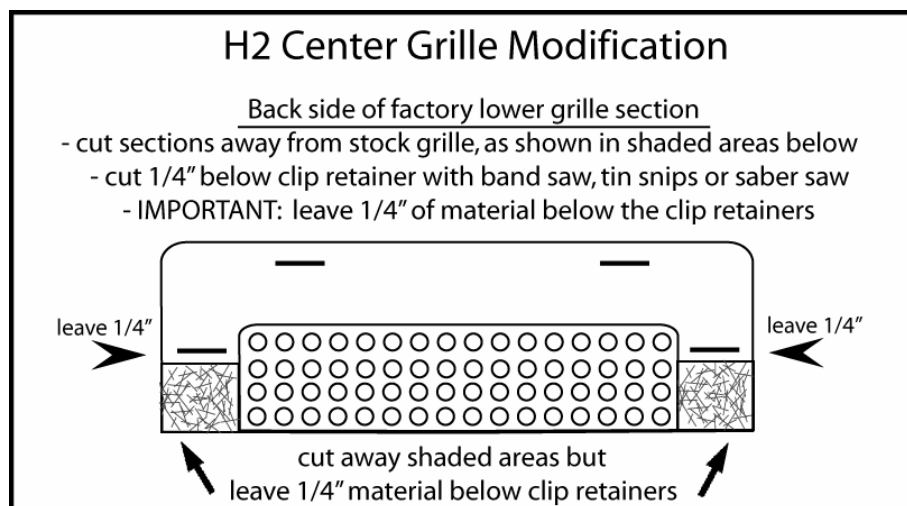

7. Open hood and reconnect the driving lights. **Happy Motoring!** www.TruckMasterDesigns.com